+ QUICK START GUIDE



Model BB-422TTL

Four-channel RS-422/EIA-530 to TTL/5V Converter

Before you begin, be sure you have the following:

- + BB-422TTL Port-Powered Converter
- + 12 VDC Power Supply (required, sold separately)

Recommended Accessories

12 VDC Power Supply, 6 W, Int'l AC Input, 2.5mm Plug #BB-SMI6B12V-P230C1

Serial Cable, 1.8m DB25M to DB25F # BB-232AMF5



ADVANTECH

www.advantech.com

707 Dayton Road | PO Box 1040 | Ottawa, IL 61350 Phone: 1 (815) 433-5100 | Fax: 1 (815) 433-5109 www.advantech.com | e-mail: support@advantech-bb.com



Fast and easy on the web: www.advantech.com

Product Overview RS-422 / EIA-530 DB25 Female Port BS-455 RS-422 TO TTL Converter Model 422TTL Power Jack B+B SMARTWORX AD\ANTECH advantech-bb.com TTL / 5V DB25 Male Port **BB-422TTL SPECIFICATIONS** Up to 115.2 kbps **Baud Rate** RS-422/ TDA(-), TDB(+), RDA (-), RDB (+), **EIA-530** RTS A(-), RTS B(+), CTS A(-), CTS B(+) **Signals TTL Signals** TD, RD, RTS, CTS Power Requires 12 VDC external power supply MTBF 1539882 hours

1 Getting Started

Model BB-422TTL converts RS-422 or EIA-530 signals to 5V TTL ("Transistor Transistor Logic") at data rates up to 115.2 kbps. Two channels are used to convert RS-422 to TTL. Two channels are used to convert TTL to RS-422.

2 | Pinouts


Pin 7 is Signal Ground for both connectors (see diagram below).

Open pads are provided for each line. If desired, you can change the pin connectors for any of the 4 channels.

DB25 Male

TTL Side

When converting a second RS-422 channel, use the corresponding RTS "A" and RTS "B" pins (see diagram below).

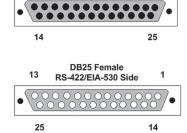

3 Polarity

Model BB-422TTL inverts the TTL signal. To determine polarity, refer to the table below .

Model BB-422TTL - Polarity (Volts)	
	RS-422 / EIA-530 Output
TTL Input	V(A) - V(B)
High	Negative
Low	Positive

TTL Output	V(A) - V(B)
	RS-422 / EIA-530 Input
High	Negative
Low	Positive

