



MS86W Series User Manual

Thank you for purchasing Menics product.

For the proper and safe use of this product, please read and fully understand this manual before use.

Instructions for safety

- * 'Instruction for safety safety' is made to prevent accidents or risks in advance by using the product safely and correctly and be sure to observe it.
- * Instructions are divided into two categories as "Warning" and "Attention" and they are as follows.



If instruction is violated, there is the possibility of serious injury or death.



If instruction is violated, there is possibility of minor injury or damage on the product.

- * The meaning of the picture symbols used in the product and User manual are as follows.
- ▲ is the sign meaning attention needs to be paid because there is the concern of risk occurrence under certain condition.

A Warning

1. In case it is used for the machines which make greater impact on life or property (e.g. nuclear power control, medical equipment, railroad car, aerospace, combustion equipment, recreation equipment, etc. or safety devices), make sure to attach safety device bifariously before use.

There is the possibility of causing huge losses resulted from fire, personal injury and property damage.

- 2. Do not disassemble and renovate the product. Please contact the head office or regional office for internal inspection or repair.
- There is the risk of causing fire, electrical shock and product damage.
- 3. While power is on, do not make wiring, maintenance or repair. There is the danger of electrical shock.
- 4. Rated voltage range must be kept for the power input voltage. There is the danger of fire or electric shock.
- 5. Before power on, make sure to check whether connection is made correctly. There is the danger of fire, electrical shock or product damage.
- 6. When replacing lens, there might be remaining current. Make sure to replace lens one minute after putting off power. There is the danger of electric shock.
- 7. Do not use the product in the area such as outdoor and explosion hazard, flammable gas, watery area, near to flammable material. There is the danger of fire, electric shock or injury.
- 8. When making installation, earthling must be done solely and use grounding wire of AWG No 16 or above. There is the danger of electric shock

A Attention

- 1. Do not leave obstacle that hinder the flow of air circulation. There is the danger of deformation and product damage caused by heat.
- 2. When the product is in operation, do not touch the product for a while. There is the danger of burn
- 3. In case abnormality happens to the product, unplug the input power conne -ction immediately.
- There is the danger of fire or product damage.
- 4. Do not use in places with severe vibration. There is the danger of product damage.
- 5. When cleaning, do not use water, organic solvent and clean with towel with -out moisture.

There is the danger of electric shock or fire.

Lighting + Flashing + Rotation + Buzzer



1. Product model classification

MS86W-R00-(2) 1

1. Function

2. Power Specification 00 | 12 ~ 24V AC/DC

R Lighting + Flashing + Rotating


Lighting + Flashing + Rotating + Buzzer


Buzzer Type: 24V available only.

3. Lens color

R	Red	Υ	Yellow
В	Blue	С	Clear
G	Green		

2. Part name

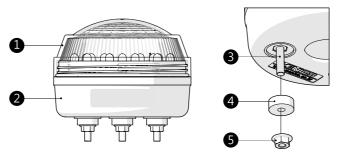

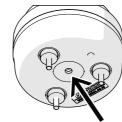

No	Part name	Material
1	Lens cap	PC resin
2	Base Body	ABS resin
3	Fastening screw	SUS M4X20
4	Dustproof rubber	NBR
5	Flange fixing nut	SUS M4

[Buzzer sound hole]

 $\ \, \spadesuit \,$ When installing display light with built-in buzzer, make sure to maintain the space (gap) between the installed side and base body at least maxi -mum 5mm or above.

3. Ratings / Performance


Feature		Lighting + Flashing + Rotating + Buzzer		
Power Specification		AC/DC 12~24V		
Outside dimension		Ø86mm		
Buzzer level		maximum 80±5dB (at 1m)		
Flashing speed Internal PCB board dip switch		F1: 80 ±10 times flashing per minute F3: 240±10 times flashing per minute (emergency signal light)		
Rotating Cycle	Rotating Cycle		App. 130±20rpm (Clockwise rotation)	
Lens Material	Lens Material		PC resin	
Ambient Temperature		-15 ~ 40°C		
Storage Temperature		-20 ~ 70°C		
Ambient Humidity		45 ~ 85% RH		
Withstand Voltage		500V AC 50/60Hz for 1 minute		
Degree of protection		IP65		
Acquisition certificate		UL, RoHS	Inner Vibration	
Standard of power cord used		1007 UL / 22AWG	0.75mm at 10~55Hz	
Weight of product		App. 170g		
Note: LED lifetime	depends o	n operating condition or e	environment.	

Current consumption (Maximum current consumption when LED is lit.)

Power Spec	12 ~ 24V	Buzzer
Red LED	500mA	
Yellow LED	500mA	
Green LED	305mA	30mA
Blue LED	350mA	
White LED	375mA	


* Outside dimension and performance of the product are subject to change without notice

4. Outside dimension (Unit: mm)

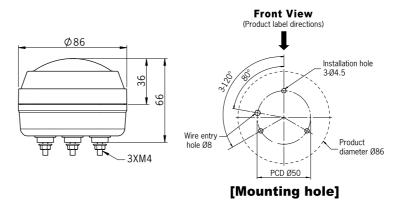

5. Product Installations

- This product has been manufactured with the structure of IP65.
- When it is used indoor, it can be installed in any direction

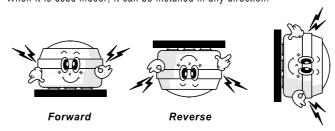


Moving direction

- Place to be installed should be the place with less vibration or shock and use it by attaching to flat surface.

6. Connection diagram


Before wiring, power supply must be turn off. There is the danger of electrical shock.

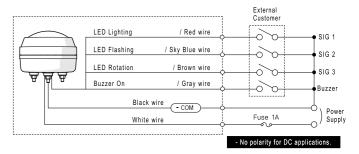



7. Fixed accessory part (Unit: mm)

▶ Well mounting Backet

Material: Steel

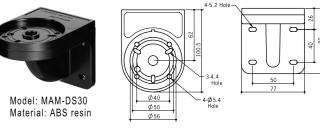




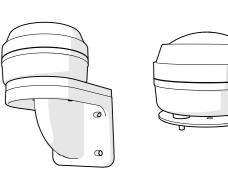

[MAP-DS30]

[MAM-DS26]





#30-11 Yongdang-Dong, Yangsan-Shi Kyungnam, 626-290, Korea TEL: +82-55-362-1813 Fax: +82-55-366-1888



MS86W 시리즈 취급설명서

메닉스 제품을 구입하여 주셔서 감사합니다.

본 제품를 바르고 안전하게 사용하기 위해서 사용 전에 본 사용설명서 를 반드시 읽고 숙지하시기 바랍니다.

안전을 위한 주의사항

- ※ '안전을 위한 주의사항'은 제품을 안전하고 올바르게 사용하여 사 고나 위험을 미리 막기 위한것이므로 반드시 지켜 주십시오.
- ※ 주의 사항은 '경고'와 '주의'의 두 가지로 구분되어 있으며 경고'와 '주의'의 다음과 같습니다.

지시 사항을 위반하였을 때, 심각한 상해나 사망이 발생할 가능성이 있는 경우

지시 사항을 위반하였을 때, 경미한 상해나 제품에 손상이 발생할 가능성이 있는 경우

※ 제품과 사용설명서에 표시된 그림기호의 의미는 다음과 같습니다. ▲ 는 특정조건 하에서 위험이 발생할 우려가 있으므로 주의하라는 기호입니다.

▲ 경고

- 1. 인명이나 재산상에 영향이 큰 기기(예: 원자력 제어, 의료기기, 차량 철도, 항공, 연소장치, 오락기기 등 또는 안전장치)에 사용할 경우 반드시 2중으로 안전장치를 부착한 후 사용하여 주십시오. 화재, 인명사고, 재산상의 막대한 손실이 발생할 수 있습니다.
- 2. 제품을 분해 및 개조하지 마십시오. 내부 점검이나 수리는 본사 또는 사무소에 문의 바랍니다. 화재, 감전, 및 제품 파손의 우려가 있습니다.
- 3. 전원이 인가된 상태에서 결선 및 점검, 보수를 하지 마십시오.
- 4. 전원 입력 전압은 반드시 정격 범위를 지켜 사용하십시오. 화재나 감전의 우려가 있습니다.
- 5. 전원을 인가하기 전에 반드시 접속이 정확한지 확인하십시오. 화재나 감전 및 제품 파손의 우려가 있습니다.
- 6. 램프의 교환 시 내부에 강한 전류가 남아 있으므로, 반드시 전원 차 단 후, 1분 후에 램프를 교환하여 주십시오. 화재나 감전 및 제품 파손의 우려가 있습니다.

7. 실외 및 폭발의 위험, 인화성 가스, 물이 있는 장소, 가연물 근처, 진동이 많은 곳에서는 사용하지 마십시오. 화재나 감전, 부상의 우려가 있습니다.

8. 설치시에는 반드시 단독으로 접지하시고 AWG No16 이상의 접지선을 사용하십시오.

감전의 우려가 있습니다.

▲ 주 의

- 1. 제품 주의에 통풍을 방해하는 장애물을 두지 마십시오. 발열에 의한 제품의 파손 및 변형의 우려가 있습니다.
- 2. 제품 동작 중. 정지 후 얼마동안은 제품을 만지지 마십시오. 감전 또는 화상의 우려가 있습니다.
- 3. 제품에 이상이 발생할 경우 즉시 입력 전원을 차단해 주십시오. 화재나 제품 파손의 우려가 있습니다.
- 4. 진동이 심한 곳에서는 사용하지 마십시오. 제품의 파손 우려가 있습니다
- 5. 청소 시 물, 유기용제를 사용하지 마시고, 물기가 없는 마른 수건으로 청소하십시오.

감전 및 화재의 우려가 있습니다.

점등/점멸/회전/부저



1. 제품모델구분

MS86W - R 0 0 - R (1)

1. 제품구분

R 점등+점멸+회전 점등+점멸+회전+부저

00 12 ~ 24V AC/DC

3. 렌즈 색상


R	적색
Υ	황색
G	녹색
В	청색
С	투명


[참고 1]

2. 전원사양

부저타입은 전원 24V에서만 가능 합니다.

2. 부품명

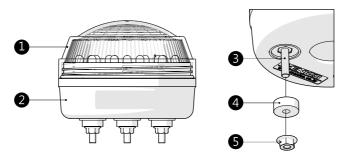

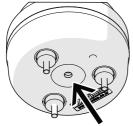

No	무 품 명	재 질
1	렌즈 캡	PC resin
2	베이스	ABS resin(검정색)
3	고정부 나사	SUS M4X20
4	방진 고무	NBR
5	고정 너트	SUS M4

[부저 사운드 홀]

- 부저 내장 표시등을 설치 시 설치면과 베이스 몸체와의 간격을 최대 5mm이상 유지하여 주십시오.

3. 정격/성능

기능	점등 + 점멸+ 회전 + 부저		
전원사양	AC/DC 12~24V		
외형치수	86mm		
부저 사운드 레벨	약. 80±5dB (at 1m)		
점멸 속도	F1: 분당 80±10회 점멸 F3: 분당 240±10회 점멸 (긴급 신호 표시등)		
회전 속도	약. 130±20rpm (시계방향으로 회전)		
사용주위온도	-15 ~ 40°C		
보관온도	-20 ~ 70°C		
사용주위습도	45 ~ 85% RH		
내 전압	500V AC 50/60Hz에서 1분간		
보호등급	IP65	내진동	
취득인증	UL, RoHS 0.75mm at 10~55Hz		
사용 전원선 규격	1007 UL / 22AWG		
제품중량	약. 170g		


Note: LED의 수명은 운영 조건이나 환경에 따라 달라집니다.

소비전류 (점등상태일때의 소비전류)

	12 ~ 24V	부저
적색 LED	500mA	
황색 LED	500mA	
녹색 LED	305mA	30mA
청색 LED	350mA	
흰색 LED	375mA	

※ 외형 치수 및 성능은 제품의 개선을 위하여 예고없이 변경될 수 있습니다.

4. 외형치수 (단위: mm)

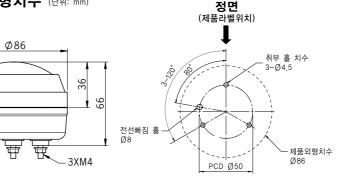


〈제품취부홀 가공치수〉

행방향

6. 결선도

배선 연결하기 전에 반드시 전원 공급 장치를 끄십시오. 전기 감전의 우려가 있습니다.

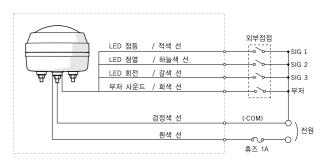


7. 고정 악세사리부품 (단위: mm)


▶ 벽 취부 브라겟트



모 델: MAP-DS30 재 질: ABS resin

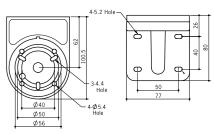

모 델: MAM-DS26



[MAP-DS30]

[MAM-DS26]

5. 제품설치

본 제품은 IP65 구조로 제작이 되었습니다. 옥내에 사용시 어떠한 방향으로 설치하셔도 무난 합니다. 역방향 정방향



- 설치 장소는 진동이나 충격이 적은 곳, 설치 면이 평평한 곳에 부착하여 사용하여 주십시오.
- 수분이나 분진이 많은 곳은 되도록이면 피하여 주십시오.

MENICS SIGNALTECHNOLOGY 경남 양산시 용당동 30-11번지 우.626-290

전화: 055-362-1813 팩스: 055-366-1888 http://www.menics.co.kr E-mail: menics@chol.com