

# Autonics Refrigeration Temperature Controller TC3YF SERIES INSTRUCTION MAUAL



Thank you for choosing our Autonics product. Please read the following safety considerations before use.

## Safety Considerations

- Please observe all safety considerations for safe and proper product operation to avoid hazards.
- Safety considerations are categorized as follows.
  - Warning:** Failure to follow these instructions may result in serious injury or death.
  - Caution:** Failure to follow these instructions may result in personal injury or product damage.
- The symbols used on the product and instruction manual represent the following
  - A symbol represents caution due to special circumstances in which hazards may occur.

## Warning

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.** (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in personal injury, fire, or economic loss.
- The unit must be installed on a device panel before use.** Failure to follow this instruction may result in electric shock.
- Do not connect, repair, or inspect the unit while connected to a power source.** Failure to follow this instruction may result in electric shock.
- Check the terminal numbers before connecting the power source.** Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit. Please contact us if necessary.** Failure to follow this instruction may result in electric shock or fire.

## Caution

- Do not use the unit outdoors.** Failure to follow this instruction may result in shortening the life cycle of the unit, or electric shock.
- When connecting the power input and relay output cables, use AWG 12 to 28 cables. Make sure to tighten the relay output terminal screw bolt 0.3 to 0.4N·m.** Failure to follow this instruction may result in fire due to contact failure.
- Use the unit within the rated specifications.** Failure to follow this instruction may result in shortening the life cycle of the unit, or fire.
- Do not use loads beyond the rated switching capacity of the relay contact.** Failure to follow this instruction may result in insulation failure, contact melt, contact failure, relay broken, or fire.
- Do not use water or oil-based detergent when cleaning the unit. Use dry cloth to clean the unit.** Failure to follow this instruction may result in electric shock or fire.
- Do not use the unit where flammable or explosive gas, humidity, direct sunlight, radiant heat, vibration, or impact may be present.** Failure to follow this instruction may result in fire or explosion.
- Keep dust and wire residue from flowing into the unit.** Failure to follow this instruction may result in fire or product damage.
- Check the polarity of the measurement input contact before wiring the temperature sensor.** Failure to follow this instruction may result in fire or explosion.

## Ordering Information


TC	3	Y	F	-	1	4	R
Control output	R	Relay output					
Power supply	1	12-24VDC					
	4	100-240VAC 50/60Hz					
Control output for refrigeration	1	Compressor output					
	2	Compressor+Defrost output					
	3	Compressor+Defrost+Evaporator-fan output					
Control mode	F	Freezing					
Size	Y	DIN W72xH36mm					
Digits	3	999 (3 digit)					
Item	TC	Temperature Controller					

## Input Type and Temperature Range

Input type	Temperature range (°C)	Temperature range (°F)
Thermistor (5kΩ)	-40.0 to 99.9	-40 to 212
RTD (DPT 100Ω)*1	-99.9 to 99.9	-148 to 212

\*1: RTD input type is option.

## Connections

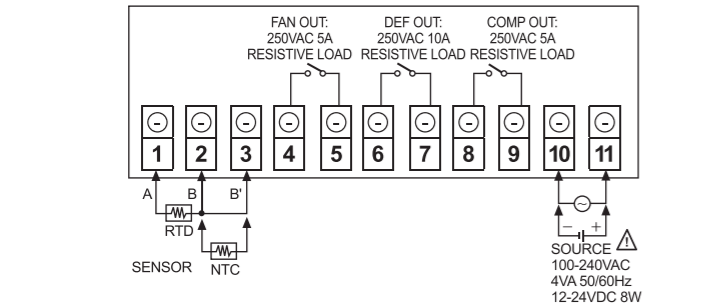


\*The above specifications are subject to change and some models may be discontinued without notice.

## Specifications


Model	TC3YF-1_R	TC3YF-2_R	TC3YF-3_R
Power supply	AC power 100-240VAC 50/60Hz		
	DC power 12-24VDC		
Allowable voltage range	90 to 110% of rated voltage		
Power consumption	AC power Max. 4VA (100-240VAC 50/60Hz)		
	DC power Max. 8W (12-24VDC)		
Display method	7 Segment LED method (red)		
Character size (W×H)	7.4×15.0mm		
Input type	NTC: 5kΩ, RTD*: 100Ω		
Input line resistance	Allowable line resistance is max. 5Ω per a wire		
Sampling period	500ms		
Display accuracy	* At room temp. (23 ±5°C); (PV ±0.5% or 1°C, select the higher one) rdg ±1digit * Out of room temp. range: (PV ±0.5% or 1°C, select the higher one) rdg ±1°C		
Control output	Compressor (COMP) 250VAC 5A 1a	Defrost (DEF) —	Evaporator-fan (FAN) —
		250VAC 10A 1a	250VAC 5A 1a
Control method	ON/OFF control		
Hysteresis	0.5 to 5.0°C, 2 to 50°F variable		
Relay life cycle	Compressor (COMP) Mechanical: Min. 20,000,000 operations, Electrical: Min. 50,000 operations (250VAC 5A resistive load)	Defrost (DEF) Mechanical: Min. 20,000,000 operations, Electrical: Min. 100,000 operations (250VAC 10A resistive load)	Evaporator-fan (FAN) Mechanical: Min. 20,000,000 operations, Electrical: Min. 50,000 operations (250VAC 5A resistive load)
Memory retention	Approx. 10 years (non-volatile memory method)		
Insulation resistance	100MΩ (at 500VDC megger)		
Dielectric strength	2000VAC 60Hz for 1 min (between all external terminals and case)		
Vibration	Mechanical 0.75mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours	Malfunction 0.5mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 10 min	
Noise resistance	AC power Square-wave noise by the noise simulator (pulse width: 1μs) ±2kV R-phase and S-phase	DC power Square-wave noise by the noise simulator (pulse width: 1μs) ±500V R-phase and S-phase	
Environment	Ambient temperature -10 to 50°C, storage: -20 to 60°C	Ambient humidity 35 to 85%RH, storage: 35 to 85%RH	
Protection structure	IP65 (front part, IEC Standards)		
Approval	UL (except DC power)		
Weight*2	Approx. 229g (Approx. 143g)		

- \*1: RTD input type is option.
- \*2: The weight includes packaging. The weight in parentheses is for unit only. The weight may be varied by model specification and option.
- \*Environment resistance is rated at no freezing or condensation.


## Part Description

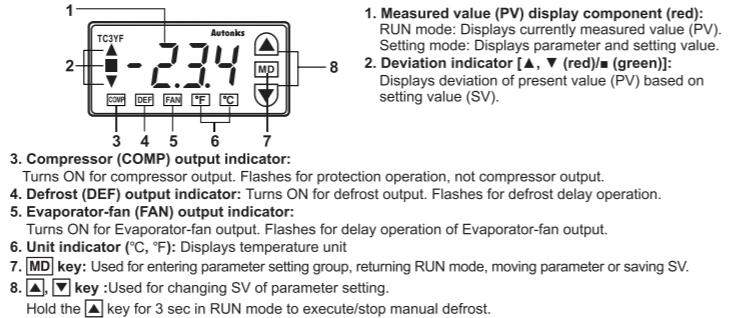

## Dimensions

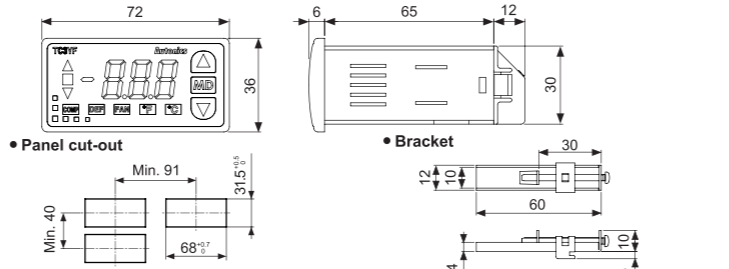


## SV Setting

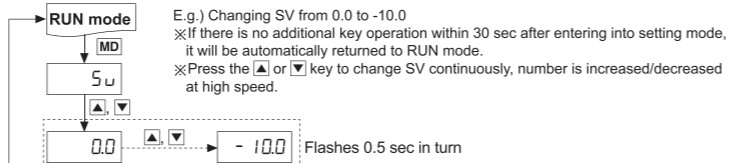


## Factory Default

SV Setting			
Parameter	Default		
Su	0.0		
Parameter 1 group			
Parameter	Default	Parameter	Default
HYS	1.0	lnb	0.0
dIn	4	LSu	40.0
dEt	30	HSu	9.99
LbR	0		
Parameter 2 group			
Parameter	Default	Parameter	Default
SdL	0.20	dLE	0
oNt	0.20	dUt	50
dRP	100	UnT	oC
FRn	EF1	LoC	oFF

## Parameter Group

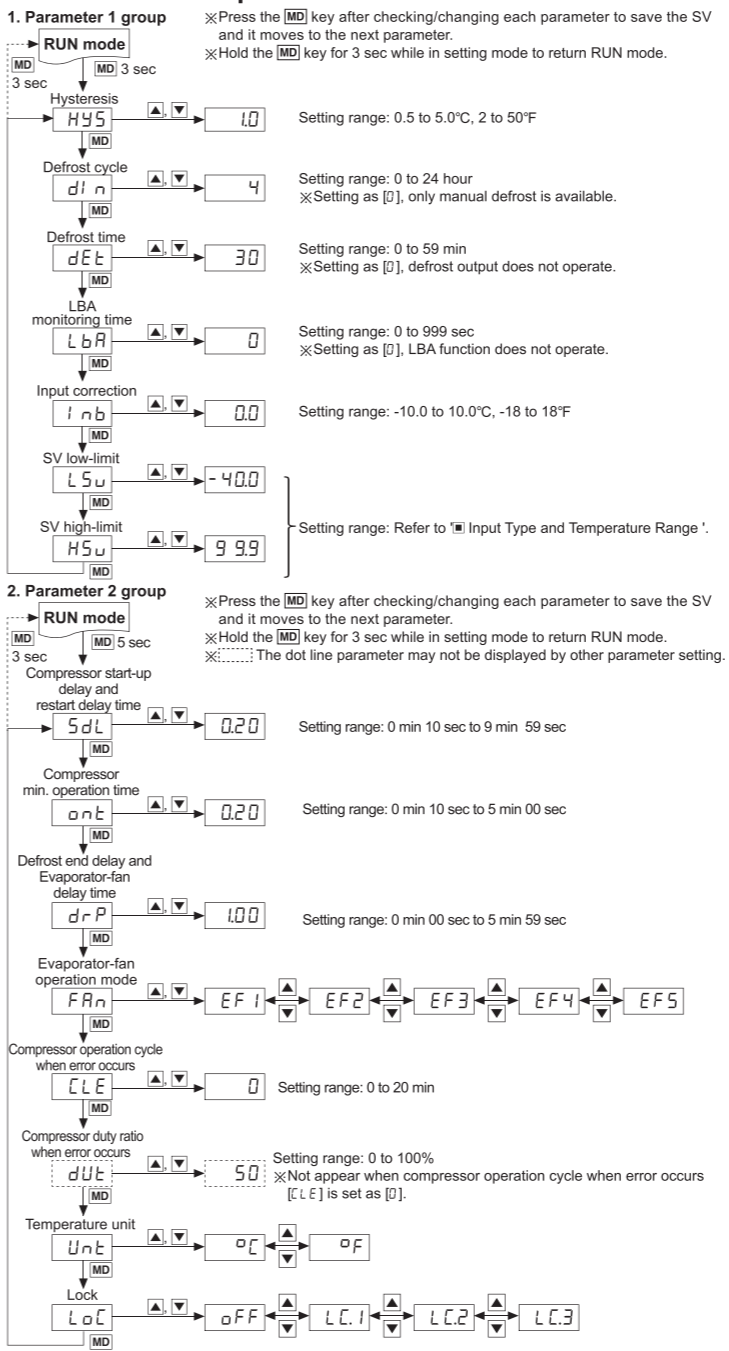

## Functions

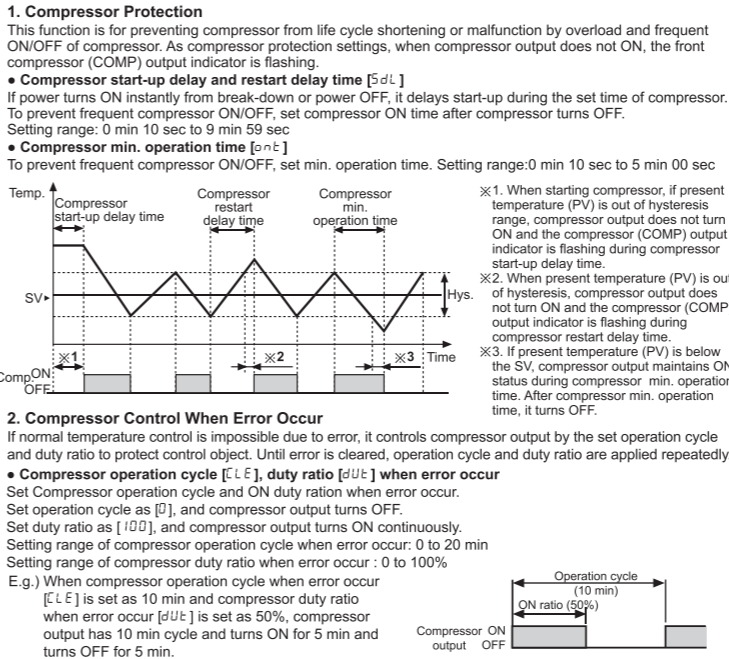

## 3. Defrost Control

When operating a compressor for a long time, an evaporator and a freezer are freezing and thermal efficiency of compressor is decreased. For increasing thermal efficiency, defrost operation helps to remove frost or ice around of evaporator. Set defrost cycle, time, etc. to operate defrost (heater defrost). The front defrost (DEF) output indicator turns ON during defrost output and it flashes during defrost delay operation.

• **Defrost cycle [dIn], Defrost time [dEt]**  
Set defrost cycle and time to operate defrost at every set cycle and during the set time. Set defrost cycle as [0], only manual defrost is available.  
Setting range of defrost cycle: 0 to 24 hour Defrost time Setting range: 0 to 59 min


• **Manual defrost**  
Execute defrost manually regardless of the set defrost cycle. Hold the [V] key for 3 sec to operate defrost during the set defrost time. When defrost output turns ON, operating compressor output, Evaporator-fan output turn OFF. Hold the [V] key for 3 sec during manual defrost, applied manual defrost is complete and pre-set defrost cycle restarts.

• **Defrost end delay and Evaporator-fan start-up delay time [dRP]**  
Defrost end delay time and Evaporator-fan start-up delay time operate individually by one setting. Setting range: 0 min 00 sec to 5 min 59 sec

• **Defrost end delay time:** During defrost operation, drops may exist at evaporator. Set the time to drain remained drops after completing defrost.

• **Evaporator-fan start-up delay time:** If evaporator temperature is increased by defrost operation, warm air may flow into cooling system by Evaporator-fan operation. Set Evaporator-fan start-up delay time to prevent warm air inflow, and it may increase cooling efficiency.

## 4. Evaporator-fan operation mode

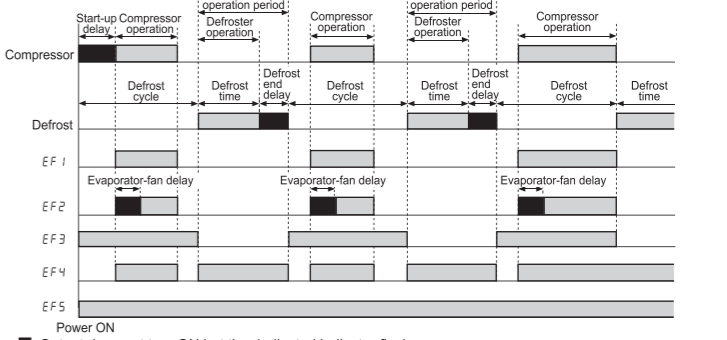

Power ON

Output does not turn ON but the dedicated indicator flashes.

Parameter	Operation method
EF1	When compressor operates, evaporator-fan also operates. When compressor operation is finished, evaporator-fan also operation turns OFF.
EF2	When compressor operates, evaporator-fan operates after the set evaporator-fan start-up delay time. When compressor operation is finished, evaporator-fan operation turns OFF. (regardless of defroster operation)
EF3	When power turns ON, evaporator-fan operates. When defroster operates, evaporator-fan stops. (regardless of compressor operation)
EF4	Evaporator-fan operates only when operating compressor or defrost. Evaporator-fan stops when compressor and defroster stops. (for above zero temperature control)
EF5	Evaporator-fan operates from power ON to power OFF. (regardless of compressor, defroster operation)

## 5. Loop Break Alarm (LBA) [LbR]

When freezer temperature is not changed over 1.0 (2°F) during set LBA monitoring time [LbR] of parameter 1 group, it regards as abnormal compressor and it displays error. (Err → LbR, flashings in turn) When error occur, compressor is controlled according to the set compressor operation cycle [CLE] and duty ratio [dUt] when error occur. Check the compressor and hold the [V] key for 3 sec and error clears and it operates normally.

Display	Description
oFF	Unlock
Lc.1	Parameter 2 group
Lc.2	Locks parameter 1, 2 groups
Lc.3	Locks parameter 1, 2 groups, SV setting

Flashing in turn	Description	Troubleshooting
Err → oPn	When input sensor is break or sensor is disconnected.	Check input sensor status.
Err → HHH	If the measured temperature is higher than high-limit temperature among temperature setting range.	It clears when input is within the display range.
Err → LLL	If the measured temperature is lower than low-limit temperature among temperature setting range.	
Err → LbR	Even though input sensor is normal, freezer temperature does not change over 1.0°C (2°F) during LBA monitoring time [LbR].	Check the compressor and hold the [V] key at the same time for 3 sec. It clears when input is within the adequate range.

## Caution During Use

- Please separate the unit wiring from high voltage lines or power lines to prevent inductive noise.
  - Install a power switch or circuit breaker to control the power supply.
  - The power switch or circuit breaker should be installed where it is easily accessible by the user.
  - The unit is for temperature controller. Do not use the unit as volt-meter or ampere-meter.
  - When using RTD temperature sensor, must wire it as 3-wire type. If cable is extended, use 3 wires which are same thickness as the line. It might cause the deviation of temperature when line resistance is different.
  - If power line and input signal line are close each other, install line filter for noise protection at power line and use shielded input signal line.
  - Keep away from the high frequency instruments. (High frequency welding machine & sewing machine, large capacity SCR controller).
  - This unit may be used in the following environments.
    - It shall be used indoor. (Altitude up to 2,000m.)
    - Pollution degree 2. (Installation category II.)
- \*Failure to follow these instructions may result in product damage.

## Major Products

- Photoelectric Sensors
- Fiber Optic Sensors
- Door Sensors
- Area Sensors
- Proximity Sensors
- Pressure Sensors
- Rotary Encoders
- Connector/Sockets
- Switching Mode Power Supplies
- Control Switches/Lamps/Buzzers
- I/O Terminal Blocks & Cables
- Stepper Motors/Drivers/Motion Controllers
- Graphic/Logic Panels
- Field Network Devices
- Laser Marking System (Fiber, Co., Nd: YAG)
- Laser Welding/Cutting System
- Temperature Controllers
- Temperature/Humidity Transducers
- SSRs/Power Controllers
- Counters
- Timers
- Panel Meters
- Tachometers/Pulse (Rate) Meters
- Display Units
- Sensor Controllers

**Autonics Corporation**  
http://www.autonics.com

HEADQUARTERS:  
18, Bansong-ro 513beon-gil, Haeundae-gu, Busan, South Korea, 48002

OVERSEAS SALES:  
#402-303, Bucheon Techno Park, 655, Pyeongcheon-ro, Wonmi-gu, Bucheon, Gyeonggi-do, South Korea, 14502  
TEL: 82-32-610-2730 / FAX: 82-32-329-0728  
E-mail: sales@autonics.com