

CONTROL TRANSFORMER ACCESSORIES

CATALOG NUMBER	DESCRIPTION	APPROX. WEIGHT	
		LBS	KG
	IP-20 Safetouch™ Covers		
TPTC-2001	10PACK 4TERM.	1.0	0.5
TPTC-2002	10PACK 6TERM.	1.0	0.5
TPTC-2006	10PACK UNIVERSAL PRI BLOCK	1.0	0.5
			
FKTP-1001	PRIMARY CL "CC" FUSE KIT	0.25	0.1
			
	Bulk Fuse Clips		
514-1661-01C	BULK FUSE CLIPS 13/32 X 1-1/2 SMALL TERMINALS	N/A	
514-1662-01A	BULK FUSE CLIPS 13/32 X 1-1/2 LARGE TERMINALS	N/A	
514-1661-02C	BULK FUSE CLIPS 1/4 X 1-1/4 SMALL TERMINALS	N/A	
514-1662-02A	BULK FUSE CLIPS 1/4 X 1-1/4 LARGE TERMINALS	N/A	
514-1621A	BULK FUSE CLIPS 9/16 X 2 FITS SMALL TERMINALS ONLY	N/A	
	Bulk Jumpers		
514-1653-02A	BAGGED JUMPERS SMALL TERMINALS – 2 PER BAG	N/A	
514-1654-02B	BAGGED JUMPERS LARGE TERMINALS – 2 PER BAG	N/A	
	Optional Factory Installed Primary Fuse Holders		
CL. "CC" PRI.	P/N SUFFIX = RB, RK, RX, RJ, RR, RY, RG, RL, RN, RC, -8		
	*Non-rejection version available on all factory installed primary fuseblock options		
	Secondary Fuse Clip Options		
1/4 X 1-1/4 SEC.	P/N SUFFIX = JQ, XQ		
9/16 X 2 SEC.	P/N SUFFIX = JM, XM FITS SMALL TERMINALS ONLY		

TRANSFORMER ACCESSORY INTERCHANGE MATRIX

WITHOUT PRIMARY FUSE BLOCK	>>	DUAL CLASS "CC" PRIMARY FUSED SUFFIX
JK, JKF, JKH	>>	RB, RBF, RBH
XK, XKF, XKH	>>	RK, RKF, RKH
XX, XXF, XXH	>>	RX, RXF, RXH
XJ, XJF, XJH	>>	RJ, RJF, RJH
JJ, JJF, JJH	>>	RR, RRF, RRH
JM, JMF, JMH	>>	RY, RYF, RYH
XM, JMF, JMH	>>	RG, RGF, RGH
JQ, JQF, JQH	>>	RL RLF, RLH
XQ, XQF, XQH	>>	RN, RNF, RNH
JX, XJF, XJH	>>	RC, RCF, RCH
-1, -1F, -1H	>>	-8, -8F, -8H

PRIMARY FUSE KIT # FKTP-1001

Universal mounting instructions


In addition to factory installed primary fusing capability Micron offers a primary fuse kit for ImperviTRAN intended for field installation. The primary fuse kit includes a 2-pole Class "CC" fuse block, instructions and all associated mounting hardware. Additionally, this fuse block will fit many competitive units. To order this kit, use catalog number FKTP-1001. The primary fuse kit, when installed, will add a maximum of 11/16" to the transformer "A" dimension and 1-15/16" to the "C" dimension.

For transformers with integral accessory mounting plate

1. Connect one end of the 2 primary leads (#1) under the appropriate primary terminal screws. Secure screws to 16 lb-in <500VA and 30 lb-in 500VA and larger.
2. Insert locking clips (#4) oriented as shown into the fuse block (#3) pockets. Use caution in choosing screw length if locking clips are not used.
3. Attach clips and fuse block to accessory mounting plate (#2) using screws (#5). Recommended torque 16 lb-in.
4. Insert fuses (not supplied) into fuse block followed by fuse block covers (#6) (IF ORDERED) with lock slots (#6a) matching tip of the clips, as shown. Press down until cover locks.


Cover cannot be removed without releasing tab from detent (#6a). A tip of a pen will suffice.

Refer to primary fuse chart for recommended fuses.

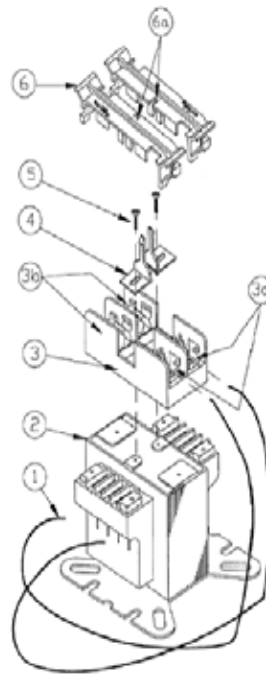

For transformers without integral accessory mounting plate:

Loosen two outer screws on primary side of transformer. On 6-terminal designs leave 2 open spaces between. Capture mounting brackets and leads under terminal screws and tighten to correct value.

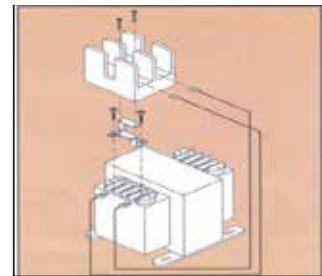

5. Connect the other end of the 2 primary leads (#1) under the screws on each of the 2 poles on the fuse block (#3a) and secure to 20 lb-in.
6. Apply primary voltage to the opposite end of the fuse block (#3b).

Additionally the mounting plate (#2) can be utilized to mount other accessories such as DIN Rail. Use caution in choosing screw length.