

Diffuse mode sensor OBD1400-R200-2EP-IO



- Medium design with versatile mounting options
- Extended temperature range -40 °C ... 60 °C
- High degree of protection IP69K
- IO-Link interface for service and process data

Diffuse mode sensor







Function


The optical sensors in the series are the first devices to offer an end-to-end solution in a medium-sized standard design – from the thru-beam sensor through to the measuring distance sensor. As a result of this design, the sensors are able to perform practically all standard automation

The entire series enables sensors to communicate via IO-Link.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

Multi Pixel Technology (MPT) ensures that the standard sensors are flexible and can be adapted to the application environment.

Dimensions

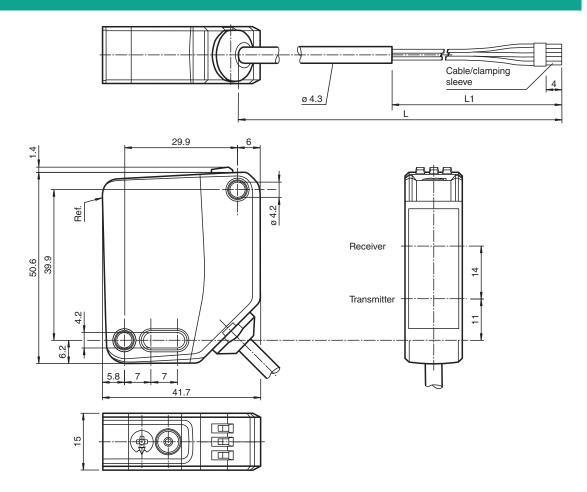







Technical Data **General specifications** Detection range 2 ... 1400 mm Detection range min. 100 ... 200 mm Detection range max. 2 ... 1400 mm Adjustment range 200 ... 1400 mm Reference target standard white, 100 mm x 100 mm Light source modulated visible red light Light type LED risk group labelling exempt group Diameter of the light spot approx. 50 mm at a distance of 1400 mm Opening angle 2 ° Ambient light limit EN 60947-5-2: 60000 Lux Functional safety related parameters 724 a MTTF_d Mission Time (T_M) 20 a Diagnostic Coverage (DC) 0 % Indicators/operating means Operation indicator LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode **Function indicator** LED yellow: constantly on - object detected constantly off - object not detected Control elements Light-on/dark-on changeover switch Control elements Sensing range adjuster **Electrical specifications** U_{R} 10 ... 30 V DC Operating voltage Ripple max. 10 % < 18 mA at 24 V Operating voltage No-load supply current I_0 Protection class Ш Interface Interface type IO-Link (via C/Q = BK) IO-Link revision Device profile Identification and diagnosis Smart Sensor type 2.4 Device ID 0x111101 (1118465) Transfer rate COM2 (38.4 kBaud) Min. cycle time Process data width Process data input 1 Bit Process data output 2 Bit SIO mode support ves Compatible master port type Output The switching type of the sensor is adjustable. The default setting is: C/Q - BK: NPN normally open / light-on, PNP normally closed / dark-on, IO-Link /Q - WH: NPN normally closed / dark-on, PNP normally open / light-on Switching type Signal output 2 push-pull (4 in 1) outputs, short-circuit protected, reverse polarity protected, overvoltage protected Switching voltage max, 30 V DC Switching current max. 100 mA, resistive load Usage category DC-12 and DC-13 ≤ 1.5 V DC Voltage drop U_d Switching frequency 1000 Hz 0.5 ms Response time Conformity IEC 61131-9 Communication interface

Technical Data	
Technical Data	
Product standard	EN 60947-5-2
Approvals and certificates	EN 00947-3-2
• •	TD 0 11 222/2211
EAC conformity	TR CU 020/2011
UL approval	E87056, cULus Listed, class 2 power supply, type rating 1
CCC approval	CCC approval / marking not required for products rated ≤36 V
Ambient conditions	
Ambient temperature	-40 60 °C (-40 140 °F) , fixed cable -20 60 °C (-4 140 °F) , movable cable not appropriate for conveyor chains
Storage temperature	-40 70 °C (-40 158 °F)
Mechanical specifications	
Housing width	15 mm
Housing height	50.6 mm
Housing depth	41.7 mm
Degree of protection	IP67 / IP69 / IP69K
Connection	2 m fixed cable
Material	
Housing	PC (Polycarbonate)
Optical face	PMMA
Mass	approx. 73 g
Cable length	2 m

Connection

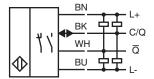

Assembly

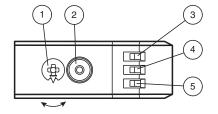



1	Sensitivity adjustment	
2	Light-on / dark-on changeover switch	
3	Operating indicator / dark on	GN
4	Signal indicator	YE
5	Operating indicator / light on	GN


3

5PEPPERL+FUCHS

Characteristic Curve

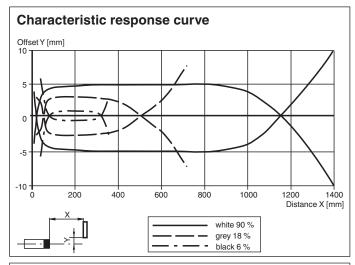

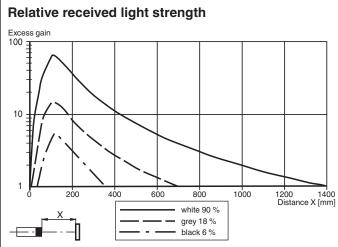

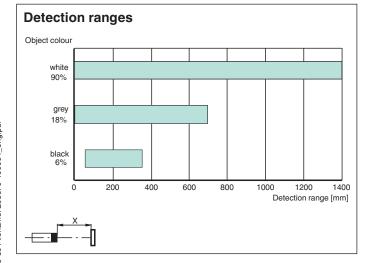

Accessories

OMH-MLV12-HWG

Mounting bracket for series MLV12 sensors


OMH-R200-01

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm



OMH-MLV12-HWK

Mounting bracket for series MLV12 sensors

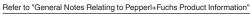

Release date: 2022-03-30 Date of issue: 2022-03-30 Filename: 295670-100004_eng.pdf

Accessories

17	OMH-R20x-Quick-Mount	Quick mounting accessory
110	ICE2-8IOL-G65L-V1D	EtherNet/IP IO-Link master with 8 inputs/outputs
le)	ICE3-8IOL-G65L-V1D	PROFINET IO IO-Link master with 8 inputs/outputs
9	ICE2-8IOL-K45S-RJ45	EtherNet/IP IO-Link master with 8 inputs/outputs, DIN rail, screw terminal
	ICE3-8IOL-K45P-RJ45	PROFINET IO IO-Link master with 8 inputs/outputs, DIN rail, push-in terminals
9	ICE3-8IOL-K45S-RJ45	PROFINET IO IO-Link master with 8 inputs/outputs, DIN rail, screw terminal
	IO-Link-Master02-USB	IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection
	ICE1-8IOL-G30L-V1D	Ethernet IO-Link module with 8 inputs/outputs
0.0	ICE1-8IOL-G60L-V1D	Ethernet IO-Link module with 8 inputs/outputs
1	ICE2-8IOL-K45P-RJ45	EtherNet/IP IO-Link master with 8 inputs/outputs, DIN rail, push-in connectors

To unlock the adjustment functions turn the sensing range /sensitivity adjuster for more than 180 degrees.

Sensing Range / Sensitivity

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.

Turn sensing range / sensitivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on /dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

Restore Factory Settings

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjustment, turn the sensing range /sensitivity adjuster for more than 180 degrees.